


8x16mm Horizontal Bend Neon Flex


48V DC | 100mm (10cm) cut | 40m single-end feed | All white colours

POWER, BENDING & ESSENTIAL CAUTIONS

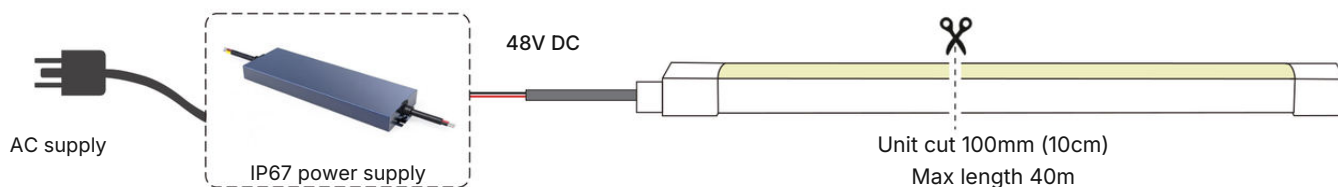

48V DC constant voltage | 100mm cut | 40m maximum single-end feed

Select a compatible IP67 supply rated for 48V DC and the actual load. Rated power is 9.4W/m: a 40m run is 376W before the supply manufacturer's allowance. Match the single-colour controller, dimmer and cable capacity to the installation.

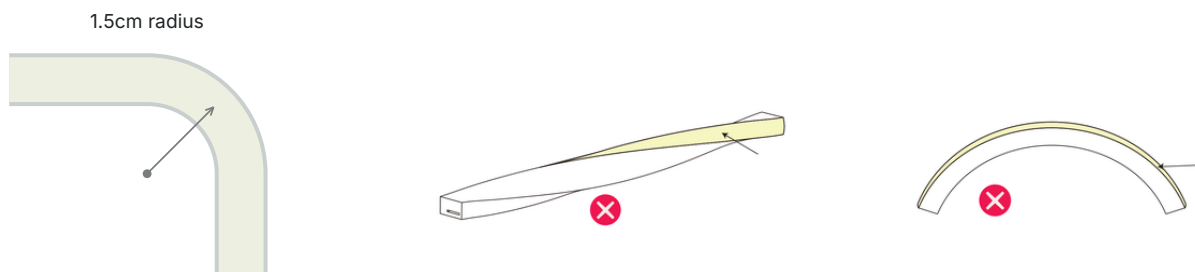

Horizontal / Side Bend only

Do not twist the neon

Do not bend vertically

8x16mm IP67 neon with a solid silicone-extruded body. Use a minimum bending radius of 1.5cm. Keep the first and last full 100mm cut unit straight beside each connector.

- 01 Isolate mains power before cutting, installation, maintenance or making any connection.
- 02 Connect and seal every joint correctly. An IP68 connection requires a verified IP68 connector system, assembled and sealed to its specified instructions. The neon body remains IP67.
- 03 Confirm the product requires 48V DC before connecting the supply. Follow the exact model limits and installation instructions.
- 04 Check positive (+) and negative (-) polarity before connecting the front cable.
- 05 Cut and connect only at marked 100mm (10cm) scissors positions. An incorrect cut or joint can damage the light.
- 06 Use a suitable constant-voltage DC supply and load-rated cables. Do not exceed its output. Never join independent power-supply outputs together.
- 07 Bend horizontally only, with a minimum 1.5cm radius. Keep the first and last full 100mm unit straight. Do not twist, kink, crush or pull the light.
- 08 Operate only within the specified -30°C to 50°C ambient-temperature range.
- 09 Fully unroll before power; do not operate in the packaging coil. The manufacturer warns never to exceed 30 minutes energised in a coil; normal installation and operation must be fully unrolled.

WARNING: Use only a 48V DC constant-voltage supply matching the light. Never connect directly to 220-240V AC mains; incorrect voltage can damage the light.


Incorrect-power damage: Damage caused by incorrect voltage or direct mains connection is not covered by warranty where ATOM LED is not at fault. ATOM LED Lighting Ltd accepts no liability for loss or damage caused by such connection where it is not at fault. This does not exclude liability for our negligence or breach of statutory duty, or affect your statutory rights.

8x16mm Horizontal Bend Neon Flex

48V DC | 100mm (10cm) cut | 40m single-end feed | All white colours

CONNECTION ACCESSORIES & CONSTRUCTION

IP67 silicone fitting options. All dimensions below are separate source-drawing callouts in millimetres, not one nominal connector size. Select a matching fitting and sealing system.

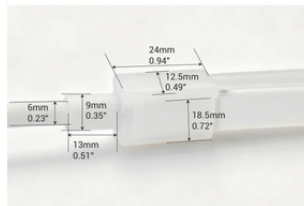


Front

24 / 12.5 / 18.5 / 9 / 6 / 13mm




Bottom

24 / 12.5 / 18.5 / 8 / 9mm

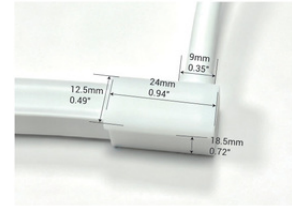


Left

24 / 12.5 / 18.5 / 9mm

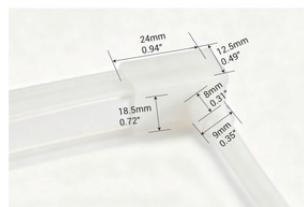

Right

24 / 12.5 / 18.5 / 8 / 9mm



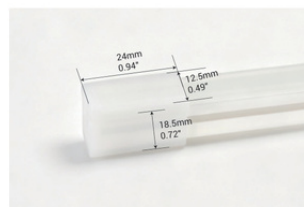


End cap

24 / 12.5 / 18.5mm


Fitting body: 24mm long, 12.5mm wide and 18.5mm high. Neck callouts are separate. Use two conductors (+ / -), support the cable and seal all fittings correctly.

BODY DIMENSIONS, HOUSING & BEAM

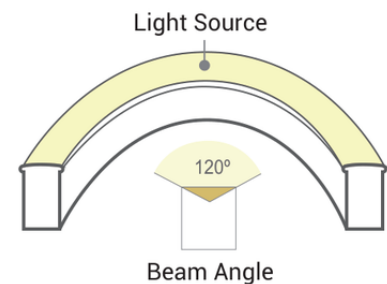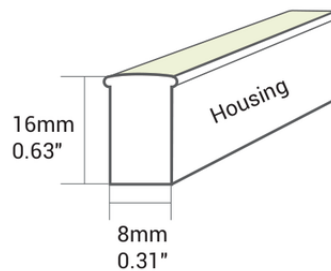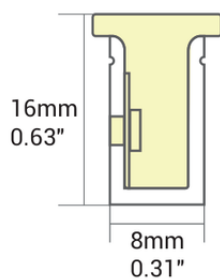

Body: 8mm wide / 16mm high. Emitting face: 11mm. Beam: 120°. Body and fitting dimensions are separate.

SILICONE CROSS-SECTION

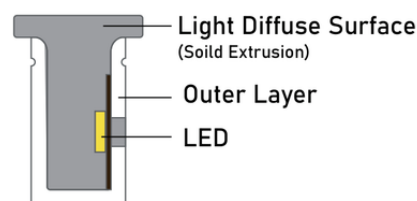

Solid silicone extrusion surrounds the LED. Example lead: 200mm with a separate 6mm callout; these do not specify cable gauge, capacity or included length.

8x16mm Horizontal Bend Neon Flex

48V DC | 100mm (10cm) cut | 40m single-end feed | All white colours


CHANNELS, TOOLS & MOUNTING



Optional 1m aluminium channel



Installed example





Channel callouts


10.5mm outside / 9mm clear width
14mm height

Mounting dimensions are separate from the 8x16mm body. Choose straight fixings for the substrate; the illustrated screw callouts are 6mm and 25mm. No universal fixing spacing is specified.


INSTALLATION METHODS

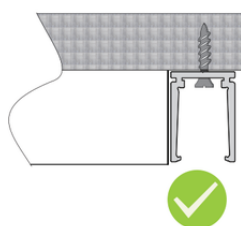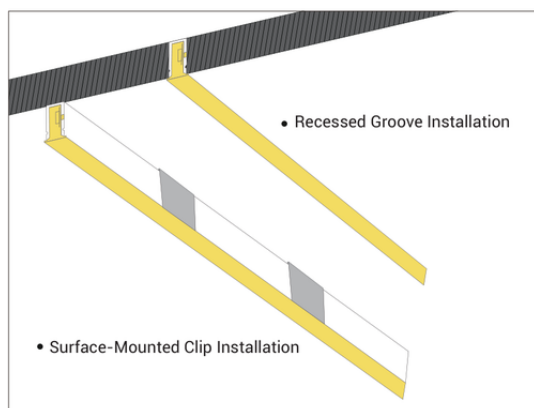

Correct: flush or recessed

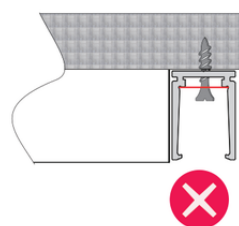

Incorrect: proud head

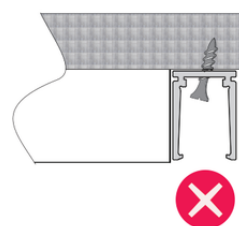


Incorrect: angled screw

Recessed groove or surface-mounted clips. Screw heads must remain flush or below the channel base, clear of the neon. Never force the light over a protruding or angled fixing.

TOOLS & PROGRESSIVE INSERTION



Manual or electric screwdriver. Secure the channel first. Deburr cut edges and remove all swarf. Keep screws and tools away from the light.

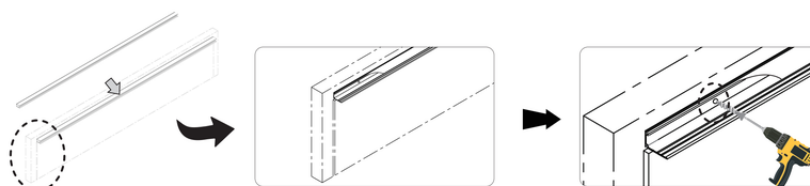

Fix the non-locking channel, then insert progressively by hand from one end. Keep the profile straight and support the silicone body evenly; do not trap a hump or force in the connectors.


8x16mm Horizontal Bend Neon Flex

48V DC | 100mm (10cm) cut | 40m single-end feed | All white colours


CONNECTOR CLEARANCES & CABLE CARE




Single feed-end mount: keep a 9.91-20.07mm gap at the connector.




Both ends: keep the same 9.91-20.07mm gap at each connector mount.




Do not pull the cable axially.



Do not sharply fold or curl the cable.



Do not overlap mounting pieces.



Do not leave a gap below 9.91mm.




Bottom entry: no downward cable load.




Keep the bottom fitting clear of the channel.




Do not fold or tightly curl a bottom lead.



Support the cable in its exit direction.



Insert from one end; do not trap a hump.




Moulded feed: do not fold the cable back.




Moulded feed: gap at least 9.91mm.



Never force an end fitting into the channel.



No axial pull on the moulded connector.



No sideways pull or sharp cable fold.



Support a downward cable independently.



Moulded feed: avoid a trapped middle hump.

Clasp/sleeve and moulded fittings must remain unstressed. Use cable strain relief; no seal should carry cable weight or pulling force. Clearance callouts describe the illustrated fitting arrangement, not universal fixing spacing.

8x16mm Horizontal Bend Neon Flex

48V DC | 100mm (10cm) cut | 40m single-end feed | All white colours

INSTALLATION STEPS 1-3: PLAN, CUT & TIN

Isolate power. Use the matching termination kit and its instructions. This sequence is for a soldered connection.

Supplier process examples are not product pinout drawings: follow the actual two-wire + / - pads. Use matching components; examples do not establish which parts are included.

01 Plan the route and length

Determine the installation location, route and length. Measure and mark 100mm (10cm) cut intervals.




Measure before cutting.

02 Cut squarely at the mark

Cut only at the scissors mark. Keep the PCB flat; do not crush, tear or leave an uneven exposed end.



Cut at the marked position.

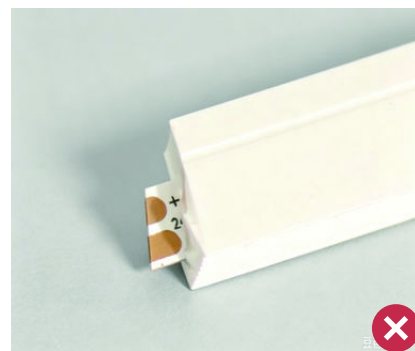


Incorrect: uneven cut. Keep the PCB flat.

03 Tin both pads and conductors


Tin the solder pads and both power conductors before joining. Untinned joints can come loose. Avoid loose strands, solder burrs and bridges: they can short-circuit and damage the neon.



Tin the solder pads.

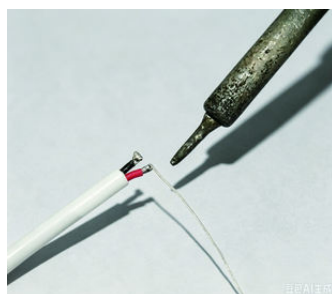

Tin both conductors.

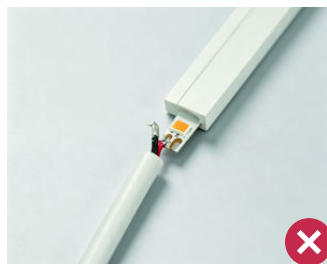

Incorrect: poor joint. Inspect joint strength.



Incorrect: solder burr. Avoid shorts and bridges.

Lay out the feed fitting, tail cap, cable and compatible sealing compound before assembly. Restore full sealing before energising.

8x16mm Horizontal Bend Neon Flex


48V DC | 100mm (10cm) cut | 40m single-end feed | All white colours

INSTALLATION STEPS 4-7: CONNECT, SEAL & CURE

Use the manufacturer-specified sealing compound and the instructions for the matching termination kit. Inspect each connection before sealing.

04 Solder and check polarity


Position the fitting first, then solder each wire to its matching + / - pad. Inspect both joints and check that they are secure. The photo shows the soldering action only.

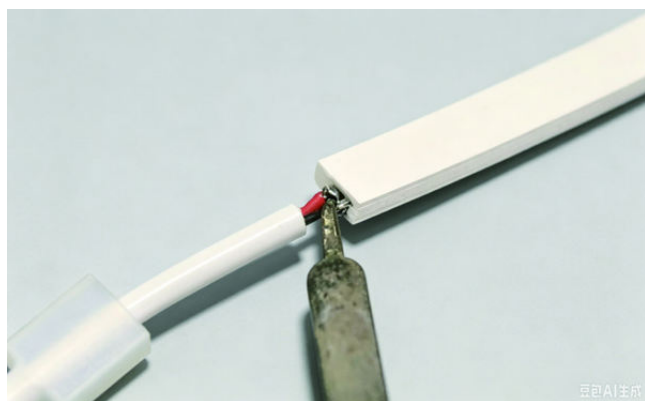

Match the actual two-wire + / - connections.

05 Seal the feed and seat fitting

Cover the exposed strip and PCB end fully with the specified sealant, then push the correct fitting fully home for a tight joint.

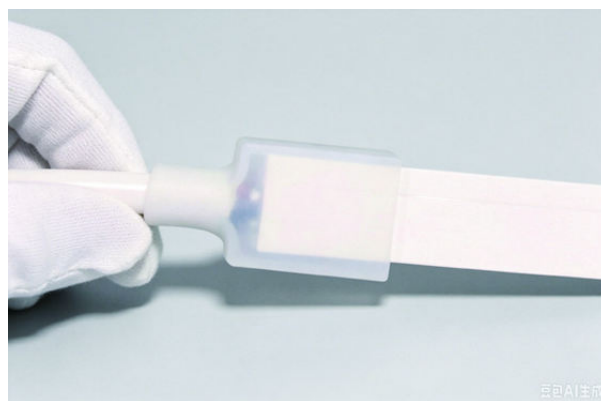

Seat the fitting fully after sealing the exposed end.

06 Seal cable entry and perimeter

Seal around the cable entry and fitting perimeter as specified. Add strain relief: the seal must not carry a pulling load or cable weight.



Seal around the entry.



Seal the fitting perimeter.

Use cable support so no pull or sideways load reaches the sealed fitting.

07 Seal the tail and allow cure

Seal the rear end, fit the tail cap, then seal its perimeter. Allow the specified full cure before powering or exposing the assembly to moisture.



Seal the rear end.



Fit the tail cap.



Seal the perimeter.




Check the finished tail.


8x16mm Horizontal Bend Neon Flex

48V DC | 100mm (10cm) cut | 40m single-end feed | All white colours


BENDING, COMMISSIONING & TROUBLESHOOTING

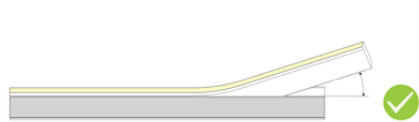


Correct: insert by hand below 15°.

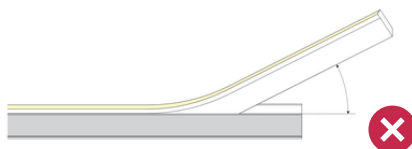


Incorrect: insertion above 15°.

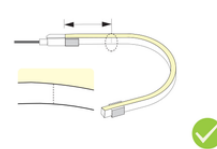

Keep the first unit straight.

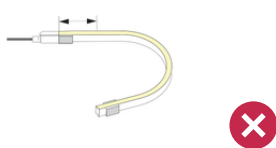

Do not bend the first or last units.

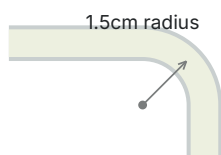

Minimum bending radius: 1.5cm.



Do not kink or make sharp folds.

Bend only in the horizontal plane. Use a minimum bending radius of 1.5cm. Keep the first and last full 100mm cut unit straight to protect the connector and seal.

Before switching on

Confirm 48V DC, + / - polarity, supply capacity, 40m run limit and 100mm cuts. Check straight end units, horizontal curves, flush screws, connector gaps, supported cables, sealed ends and completed cure. Operate within -30°C to 50°C and fully unroll before testing.

TROUBLESHOOTING

No light	Check the supply is plugged in, switched on and delivering 48V DC. Check polarity, supply-to-light/controller/dimmer joints and correct front-connector assembly.
Dim far end	Check for output below 48V DC, voltage drop, cable length and load; test the dimmer setting. Shorten the run or obtain a confirmed feed redesign.
Too bright	Check output is not above 48V DC and input is stable. Isolate power before correction.
First section off	Check wrong or uneven cuts, LED damage from connector insertion, PCB damage or water ingress. Replace the damaged marked section, reseal and insert by hand.
Flickering	Check supply capacity/stability, front contact and dimmer/controller compatibility. Confirm any additional-feed design.

Typical uses: architecture, landscape, cove/edge lighting, retail, restaurants and events. Confirm the finished system suits its environment. Isolate power before maintenance; replace damaged or poorly sealed sections.

4 Years warranty · 50,000 hours average lifetime · 120 LEDs per metre.
375 lm/m · CRI Ra >90. Refer to the matching colour-specific sheet for full specifications.